




GPS Patch Integration Application Note

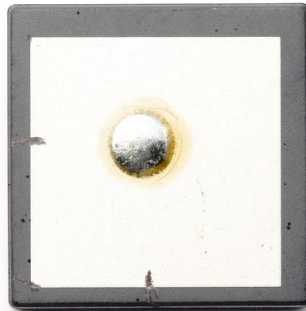

CONTENTS

1. **PATCH BASICS**
2. **POSITIONING**
3. **GROUND PLANE SIZE**
4. **BANDWIDTH**
5. **GAIN**
6. **TECHNOLOGY ADVANTAGES**
7. **MOUNTING**
8. **ENVIRONMENTAL CONSIDERATIONS**
9. **TUNING**

©Copyright 2009 All Rights Reserved.

Taoglas Limited

Unit 3, Enniscorthy Technology Centre, Mile House Road, Enniscorthy,
Co. Wexford, Ireland.

info@taoglas.com

www.taoglas.com



1. PATCH BASICS

A GPS ceramic patch antenna is preferred over other antenna typologies because it can be made into small format compact applications while maintaining it's advantages of high gain towards zenith, a key requirement for satellite based navigation systems. The other key advantage is it can be made to be circularly polarized, and this matches more efficiently with the circularly polarized radiation transmitted from the GPS satellites.


2. POSITIONING

Theoretically the best position for the GPS antenna is on top of the GPS receiver in the centre of the PCB. There are both electrical and physical reasons for this. The electrical reasons are that by placing the antenna directly above the GPS receiver removes the necessity for a transmission line on the PCB between the feed point on the antenna and the input to the GPS receiver. The physical reason is that if the antenna is placed in the centre of the PCB then the radiation plots won't be skewed due to the effects of placing it close to the edge of the PCB.

3. GROUND PLANE SIZE

The larger the ground-plane the higher the gain in general.

Also the centre frequency of the antenna will changes in size of the ground-plane.

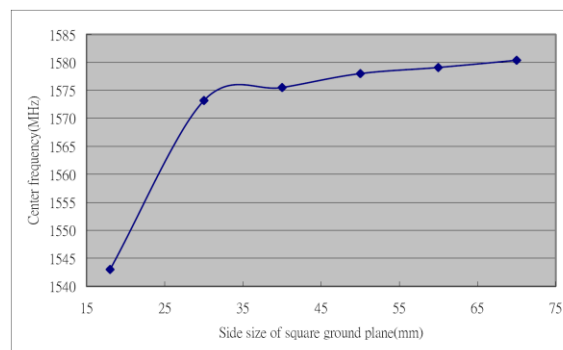

Graph of 18.5mm Patch Centre Frequency shift with Ground-plane size

©Copyright 2009 All Rights Reserved.

Taoglas Limited

Unit 3, Enniscorthy Technology Centre, Mile House Road, Enniscorthy,

Co. Wexford, Ireland.

info@taoglas.com

www.taoglas.com



4. BANDWIDTH

The effective bandwidth of a GPS antenna is usually measured by the frequency band below -10dB return loss. A GPS ceramic patch bandwidth narrows with size.

Typical bandwidths for GPS patches are as follows

25*25*4 mm	20 MHz
18*18*4 mm	10 Mhz
15*15*4 mm	8 Mhz
12*12*4 mm	7 MHz
10*10*4 mm	5 MHz

Therefore the smaller the antenna, the more chance it will have that frequency shifts in the device will cause it to perform very poorly, thus necessitating that the antenna bandwidth be retuned to have the effective bandwidth at the GPS 1.5754 GHz frequency.


5. GAIN

Gain of the antenna is chiefly determined by the directionality of the antenna and the surface area.

A GPS patch antenna has high gain towards the zenith (highest point in the sky), and gradually decreasing gain towards the horizon.

Typical peak gain for GPS patch antennas on standardized ground planes are following.

25mm Patch	5 dBi
18mm Patch	2dBi
15mm Patch	1dBi
12mm Patch	0.5 dBi
10mm Patch	-2 dBi

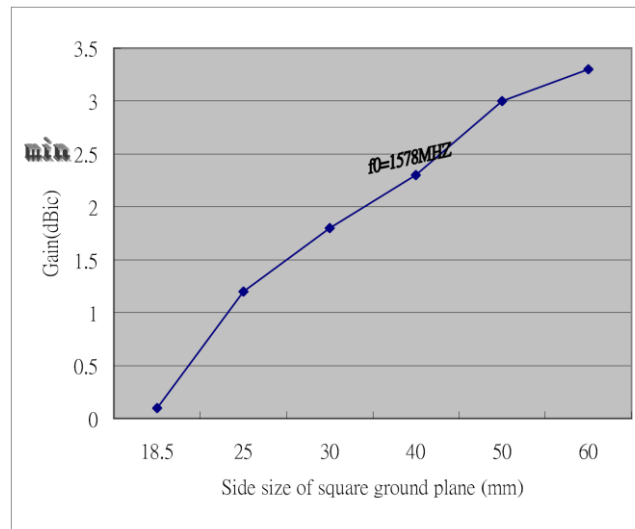

Graph of 18.5mm Patch Gain vs Size of Ground Plane

A larger ground plane will increase the gain of the antenna

6. ADVANTAGES of the GPS Patch

- Maximum gain towards sky – critical for high performance applications
- Suitable for high volume mass production
- Economical
- Small form factor
- Optimizable by tuning to environment



7. MOUNTING

There are two GPS patch mounting available.


PATCH WITH PIN

The standard patch is mounted using double sided tape to the cleared area on the device board. The pin goes through to the bottom side of the board where it is soldered to the feedline.






SMD PATCH

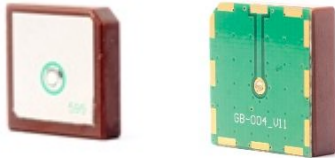

Taoglas also has unique patches that can be surface mounted using reflow soldering directly to pads on the board using normal reflow temperature profiles. The patches come in tape and reel for easy pick and place. They have been automotive quality approved at up to 20G vibrations and also pass peak temperatures in reflow process up to 261 degrees celsius at 41 seconds.

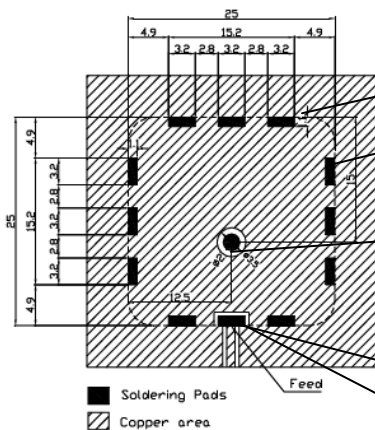

Mechanical pads –
can also be used for ground
If extra ground is available
on customer PCB

Reflow Feed point for good connection

Reflow outer feed pad point for evaluation
so customer can see solder point
and use probe to network analyzer to test.

Solder directly to GPS
Module feed line 50 ohm strip
Alternatively can use standard
via to go through pcb on other side if module is on other side

Example of SMD Patch Board Footprint on Taoglas Evaluation Board



8. ENVIRONMENTAL CONSIDERATIONS

Close proximity to components or housing affects the electrical performance of all antennas. The centre frequency will shift, and the radiation pattern will be skewed. We call the process by which we try to realign the centre frequency and impedance “tuning”.

When placed on a non-conductive area of the board, ideally there should be clearance of 4~10mm in all directions from the board/housing for maximum efficiency.


9. TUNING

GPS Patch antennas should be tuned to their ground-plane that they are mounted on and taking into account the frequency shifts due to the specific device environment the antenna finds itself in. This is done with real-life trial and error testing, which is much faster and more accurate than trying to use simulation tools.


1. Impedance matching

The antenna will be tuned to get close to a 50 Ohm match on the Smith Chart when in the device. The S11 return loss magnitude is also looked at and the industry standard is <10dB across the bandwidth.

But it can be more important to check the radiation pattern and gain at in-bandwidth frequencies to understand the real performance of the antenna in the device

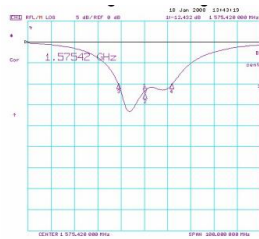

Return Loss : -12.43 dB

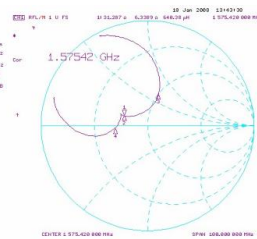

Impedance : 31.28+j6.33 Ohm



VSWR : 1.63@1575.42MHz



The antenna is physically tuned a number of ways, the shape of the top silver electrode can be changed, or the feed-point can be moved.




2. Radiation Pattern and Gain Testing


Radiation patterns of the antennas X-Y and Y-Z planes are taken in the device. This corresponds to two vertical cuts of an “apple” type pattern which is the typical pattern of a GPS patch antenna at cross angles to each other. Where they intersect we can then take their point readings at 0deg/180 deg horizontal to have four points of reference for the horizontal radiation pattern and drawing a line through them we can now solve to produce the horizontal radiation pattern of the radiation thereby giving us a 3D view of the radiation pattern. These radiation patterns tells us the most important information about the real-life antenna performance in the field such as the antenna’s ability to receive signals from satellites at low altitudes, or to be able to compare relative performance of one antenna against another. The below patterns are taken from scans of a 25mm*25mm*2mm patch on an extended 35mm ground-plane.




XZ-Plane

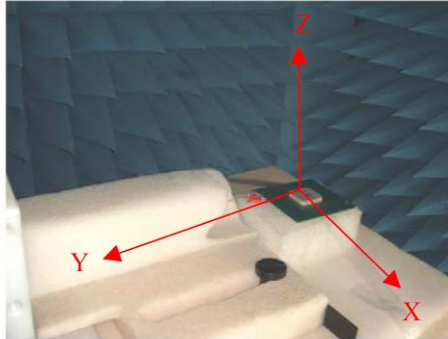


YZ-Plane

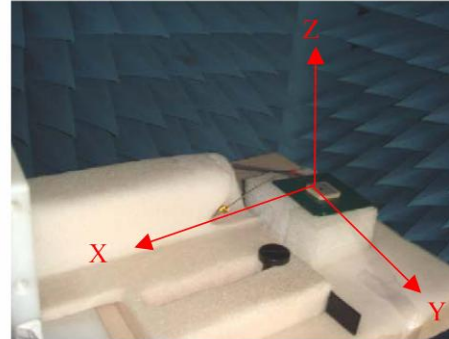

XZ Plane 1575.42 MHz

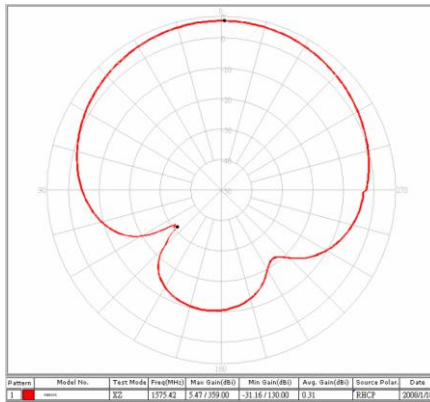

YZ Plane 1575.42 MHz

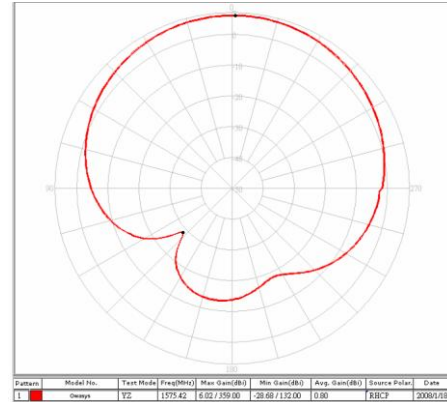

©Copyright 2009 All Rights Reserved.

Taoglas Limited

Unit 3, Enniscorthy Technology Centre, Mile House Road, Enniscorthy,

Co. Wexford, Ireland.

info@taoglas.com

www.taoglas.com